PRUNE CANOPY AS REQUIRED FOR FORM AND TREE HEALTH.

SET CROWN 1-1/2" ABOVE FINISHED GRADE MULCH AS SPECIFIED KEEP MULCH CLEAR OF TRUNK BASE.

(2) 8 FT X 2X2 INCH STAKES, STAIN BROWN. WIRE TIE DOWN 4 INCHES FROM TOP OF STAKE; STAPLE IN PLACE.

BACKFILL PLANT HOLE WITH SOIL EXCAVATED FROM HOLE. DO NOT ADD ADDITIONAL AMENDMENTS. ADD FERTILIZER AT SPECIFIED RATE.

CHAINLOCK TREE TIE. SIZE LOOP TO ALLOW TRUNK TWO-INCH SWAY.

FINISH GRADE

REMOVE TOP 1/3 OF BURLAP FROM TOP OF ROOT BALL. REMOVE WIRE CAGE, CLIP AND REMOVE ALL TWINE FROM BASE OF ROOTBALL. SLICE ROOTBALL VERTICALLY AS SPECIFIED AT THREE EQUIDISTANT LOCATIONS TO CUT CIRCLING ROOTS.

EARTH SAUCER /3 INCH RIM FOR TEMPORARY WATERING BASIN

ROOTBALL DEPTH MINUS 2"

EXCAVATE HOLE LEAVING A CONE OF UNDISTURBED SOIL AT BOTTOM.
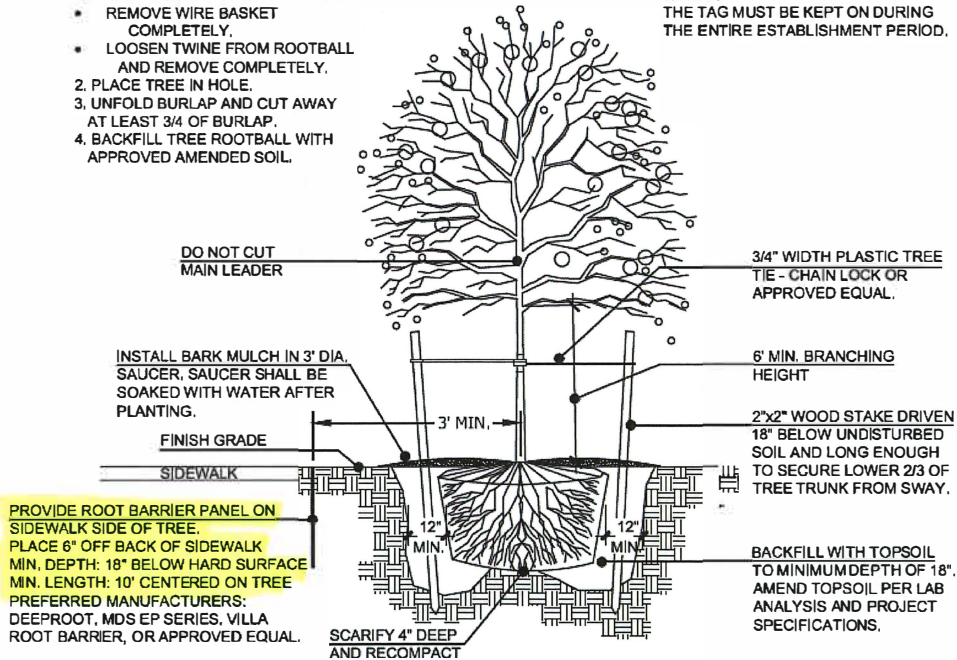
30" MIN.

3X THE SIZE OF ROOT BALL

TREE PLANTING DETAIL

SCALE: N.T.S.

3
L3.0

TREE INSTALLATION STEPS:
1. WHILE TREE IS OUT OF THE HOLE:
- REMOVE WIRE BASKET COMPLETELY.
- LOOSEN TWINE FROM ROOTBALL AND REMOVE COMPLETELY.
2. PLACE TREE IN HOLE.
3. UNFOLD BURLAP AND CUT AWAY AT LEAST 3/4 OF BURLAP.
4. BACKFILL TREE ROOTBALL WITH APPROVED AMENDED SOIL.

NOTES:
1. EVERY TREE IS TO BE TAGGED AND THE TAG MUST BE KEPT ON DURING THE ENTIRE ESTABLISHMENT PERIOD.

DO NOT CUT MAIN LEADER

INSTALL BARK MULCH IN 3' DIA. SAUCER. SAUCER SHALL BE SOAKED WITH WATER AFTER PLANTING.

FINISH GRADE

SIDEWALK

PROVIDE ROOT BARRIER PANEL ON SIDEWALK SIDE OF TREE. PLACE 6" OFF BACK OF SIDEWALK MIN. DEPTH: 18" BELOW HARD SURFACE MIN. LENGTH: 10' CENTERED ON TREE PREFERRED MANUFACTURERS: DEEPROOT, MDS EP SERIES, VILLA ROOT BARRIER, OR APPROVED EQUAL.

3/4" WIDTH PLASTIC TREE TIE - CHAIN LOCK OR APPROVED EQUAL.

6' MIN. BRANCHING HEIGHT

2"x2" WOOD STAKE DRIVEN 18" BELOW UNDISTURBED SOIL AND LONG ENOUGH TO SECURE LOWER 2/3 OF TREE TRUNK FROM SWAY.

BACKFILL WITH TOPSOIL TO MINIMUM DEPTH OF 18". AMEND TOPSOIL PER LAB ANALYSIS AND PROJECT SPECIFICATIONS.

3' MIN.

12" MIN.

12" MIN.

SCARIFY 4" DEEP AND RECOMPACT

DECIDUOUS TREE PLANTING

1

SCALE: NOT TO SCALE